When the "**Printing Status**" Window is displayed remove the window by turning off all displays.

This will stop the window "**Printing Status**" from appearing after the initial print job has completed or has been cancelled.

First window Displayed "Out of Original Lexmark Ink"



*Second window Displayed "Reserve Tank"

Push "Continue Printing"



Third window displayed "Printing Status"



"Appearance Mode" window will be displayed

Push "Never Display the Printing Status" Then push "OK".

Lexmark 4800 Series - USB Port 🛛 🕐 🔀	Lexmark 4800 Series - USB Port 🛛 ? 🔀
Balloon Tips Display upload notifications.	■ Balloon Tips ✓ Display upload notifications.
🔲 Display "Did You Know" tips.	🗖 Display "Did You Know" tips.
Appearance Mode	Appearance Mode
O Display the Printing Status in the bottom corner of the screen.	Display the Printing Status in the bottom corner of the screen.
C Display the Printing Status minimized in the Taskbar.	Display the Printing Status minimized in the Taskbar.
C Never display the Printing Status.	Never display the Printing Status.
Note: Low Ink Alert Messages will be displayed regardless of the appearance settings.	Note: Low Ink Alert Messages will be displayed regardless of the appearance settings.
Sound	Sound
✓ Play voice notification for printing events.	✓ Play voice notification for printing events.
Note: These options are available from both the Lexmark Solution Center and the Printing Status windows.	Note: These options are available from both the Lexmark Solution Center and the Printing Status windows.
OK Cancel	OK Cancel

*Last window displayed "Lexmark ???? Series Cartridge Alert"

Push

I have already ordered my ink, please don't remind me again" Then Push "Close"

